



# USB Numeric Keypad

---

*User's Guide*

OPTIONS  
by IBM

**Note:** Before using this information and the product it supports, be sure to read the information under Appendix B, "Product warranties and notices" on page 2-4.

#### **First Edition (June 2000)**

**The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law:**  
INTERNATIONAL BUSINESS MACHINES CORPORATION  
PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time.

This publication was developed for products and services offered in the United States of America. IBM may not offer the products, services, or features discussed in this document in other countries, and the information is subject to change without notice. Consult your local IBM representative for information on the products, services, and features available in your area.

Requests for technical information about IBM products should be made to your IBM reseller or IBM marketing representative.

**© Copyright International Business Machines Corporation 2000.  
All rights reserved.**  
Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

---

## **Contents**

<b>Registering your option</b>	iv
<b>About this book</b>	v
<b>Part 1: Installation and use guide</b>	1-1
<b>Part 2: Appendixes</b>	2-1
<b>Appendix A. Help and service information</b>	2-1
<b>Appendix B. Product warranties and notices</b>	2-4
Warranty Statements	2-4
Notices	2-21
Trademarks	2-22
Electronic Emission Notices	2-22

---

## **Registering your option**

Thank you for purchasing OPTIONS by IBM®. Please take a few moments to register your product and provide us with information that will help IBM to better serve you in the future. Your feedback is valuable to us in developing products and services that are important to you, as well as in developing better ways to communicate with you. Register your option on the IBM Web site at:

<http://www.ibm.com/pc/register>

IBM will send you information and updates on your registered product unless you indicate on the Web site questionnaire that you do not want to receive further information.

---

## About this book

This manual contains instructions for installing and using your IBM® USB Numeric Keypad. The manual is divided into two parts:

**Part 1:** Installation and use guide

This section contains the product description, installation instructions, product use, and maintenance information in the following languages:

- English
- German
- French
- Spanish
- Italian
- Brazilian Portuguese
- Japanese

**Part 2:** Appendixes

This appendixes contain help and service information, the product warranties, and notices.

**Note:** The illustrations in this manual might be slightly different from your hardware.



---

## **Part 1: Installation and use guide**

This guide contains the product description, installation instructions, and product use information.

---

### **Product Description**

In addition to this manual, this option package contains:

- One USB Numeric Keypad
- One device driver CD.

Contact your place of purchase if any item is missing or damaged.

**Important:** Be sure to retain your proof of purchase because it might be required to receive warranty service.

---

## **Updating the computer configuration**

Review the following information to verify that the computer configuration has been updated for a USB connection:

- Be sure that your computer has the most recent CMOS or BIOS provided by the manufacturer. You can verify this information by checking the Web site for your computer manufacturer, or by contacting the technical support team for your computer manufacturer.
- Due to recent changes in USB technology, computers that were purchased before March 1999 might not have the level of USB hardware or software needed to work correctly with this keypad. Use one or both of the following methods to ensure that you have all the latest system files for your computer and the latest updates for your operating system:
  - For system file update information, visit the Web site for your computer manufacturer or contact the technical support team for your computer manufacturer.
  - For Microsoft® Windows® 2000 or Windows 98 update information, visit the Microsoft Web site at <http://www.microsoft.com> or use Windows Update to view the latest information on the operating system.

---

## **Verifying that the USB mode is enabled**

**Note:** For information on verifying the USB mode in a non-IBM computer, refer to the documentation that comes with the computer.

The USB Numeric Keypad will work as a USB device for an IBM® desktop computer, an IBM Aptiva® computer, or an IBM ThinkPad® computer only if the computer USB mode is enabled.

To verify that the computer USB mode is enabled in an IBM desktop computer:

1. Turn on your computer.
2. When the following message displays in the lower right section of the computer screen, press F1. Press F1 for Configuration/Setup The Configuration/Setup utility menu window opens.
3. Press ↓ repeatedly to scroll through the menu selections until **USB Setup** is highlighted; then press Enter.
4. Verify that the following settings are displayed in the USB Setup menu.

<b>USB Support</b>	[Enabled]
<b>USB Keyboard/Mouse Support</b>	[Autodetect]

If a setting is disabled, enable it by using the arrow keys to select the **Enable** and **Autodetect** options in the menu.

5. Press Esc to exit the USB Setup menu; then press Esc again to exit the Devices and I/O ports menu.
6. Press Esc again to exit the Configuration/Setup utility program.
7. Press Enter to save the changes and exit. The computer automatically restarts.

**Note:** If you restore the CMOS default settings in your computer, the USB mode will be disabled and you will have to repeat the preceding steps to enable the USB mode again.

After you have verified that the computer USB mode is enabled, use the instructions given in “Installing your USB Numeric Keypad” on page 1-8 to connect the keypad to a USB connector.

To verify that the computer USB mode is enabled in an Aptiva computer:

1. Turn on your computer.
2. When the IBM and Aptiva logos display, press F1. The main CMOS menu window opens.
3. Press ↓ repeatedly to scroll through the CMOS menu selections until **Input/Output** is highlighted; then press Enter.
4. Verify that the setting on your computer matches the following setting.

**[Onboard USB]****[Enabled]**

If the setting is disabled, enable it by using the arrow keys to highlight the **Enable** option in the menu.

5. Press Esc to exit the Input/Output Ports menu; then press Esc again to exit the Main menu.

6. Press Enter to save the changes and exit. The computer automatically restarts.

**Note:** If you restore the CMOS default settings in your computer, the USB mode will be disabled and you will have to repeat the preceding steps to enable the USB mode again.

After you have verified that the computer USB mode is enabled, use the instructions given in “Installing your USB Numeric Keypad” on page 1-8 to connect the keypad to a USB connector.

To verify that the USB mode is enabled in a ThinkPad computer using Windows 2000:

1. Click **Start**.
2. Click **Settings**.
3. Double-click **Control Panel**.
4. Double-click **System**.
5. Click **Hardware**.
6. Click **Device Manager**.
7. In the displayed device list, find **Universal Serial Bus Controllers**. If there is no yellow ? or red X displayed next to **Universal Serial Bus Controllers**, the USB mode is enabled.

After you have verified that the computer USB mode is enabled, use the instructions given in “Installing your USB Numeric Keypad” on page 1-8 to connect the keypad to a USB connector.

To verify that the USB mode is enabled in a ThinkPad computer using Windows 98:

1. Click **Start**.
2. Click **Settings**.
3. Double-click **Control Panel**.
4. Double-click **System**.
5. Click **Device Manager**.
6. In the displayed device list, find **Universal Serial Bus Controllers**. If there is no yellow ? or red X displayed next to **Universal Serial Bus Controllers**, the USB mode is enabled.

After you have verified that the computer USB mode is enabled, use the instructions given in “Installing the USB Numeric Keypad software” to install the USB Numeric Keypad software.

---

## Installing the USB Numeric Keypad software

**Note:** If you are using a notebook computer, install the device driver according to the following instructions. If you are using a desktop computer, you will not need to install the device driver.

When you install the device driver, pressing the NumLock key on your USB Numeric Keypad will not

change the function of the keypad. However, the NumLock key on your notebook computer keyboard will still function normally.

Performing the following instructions for installing the device driver for the USB Numeric Keypad will shut down and restart your computer. Make sure that you close all programs before installing the device driver.


Insert the device driver CD into the CD-ROM drive.

1. On your desktop, double-click **My Computer**; then double-click the icon with the letter that corresponds to your CD drive.
2. The Welcome Window opens. Click **Next**.
3. The Installation Directory window opens. Click **Next**.
4. The Ready to Install window opens. Click **Finished**.
5. Wait until the Finished window opens. Click **Finish**.
6. Windows will now shut down and restart your computer.

After the USB Numeric Keypad software is installed, use the instructions given in “Installing your USB Numeric Keypad” on page 1-8 to connect the keypad to a USB connector.

---

## **Installing your USB Numeric Keypad**

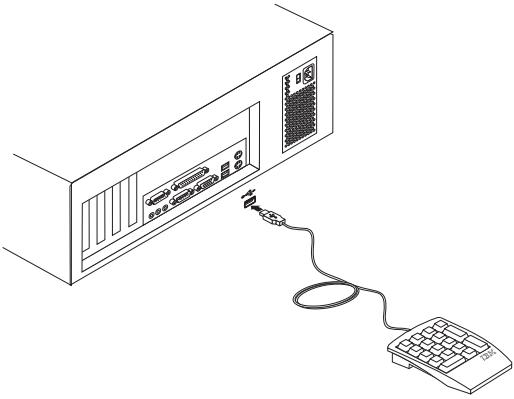

Attach the keypad cable to the USB port as shown above. For additional information on this product, visit the IBM Personal Computing Web site at: <http://www.ibm.com/pc>

---

## **Installation and use guide (translated)**

This guide contains the product description, installation instructions, and product use information.

---

### **Product Description**

In addition to this manual, this option package contains:

- One USB Numeric Keypad
- One device driver CD.

Contact your place of purchase if any item is missing or damaged.

**Important:** Be sure to retain your proof of purchase because it might be required to receive warranty service.

---

## **Updating the computer configuration**

Review the following information to verify that the computer configuration has been updated for a USB connection:

- Be sure that your computer has the most recent CMOS or BIOS provided by the manufacturer. You can verify this information by checking the Web site for your computer manufacturer, or by contacting the technical support team for your computer manufacturer.
- Due to recent changes in USB technology, computers that were purchased before March 1999 might not have the level of USB hardware or software needed to work correctly with this keypad. Use one or both of the following methods to ensure that you have all the latest system files for your computer and the latest updates for your operating system:
  - For system file update information, visit the Web site for your computer manufacturer or contact the technical support team for your computer manufacturer.
  - For Microsoft® Windows® 2000 or Windows 98 update information, visit the Microsoft Web site at <http://www.microsoft.com> or use Windows Update to view the latest information on the operating system.

---

## **Verifying that the USB mode is enabled**

**Note:** For information on verifying the USB mode in a non-IBM computer, refer to the documentation that comes with the computer.

The USB Numeric Keypad will work as a USB device for an IBM® desktop computer, an IBM Aptiva® computer, or an IBM ThinkPad® computer only if the computer USB mode is enabled.

To verify that the computer USB mode is enabled in an IBM desktop computer:

1. Turn on your computer.
2. When the following message displays in the lower right section of the computer screen, press F1. Press F1 for Configuration/Setup The Configuration/Setup utility menu window opens.
3. Press ↓ repeatedly to scroll through the menu selections until **USB Setup** is highlighted; then press Enter.
4. Verify that the following settings are displayed in the USB Setup menu.

<b>USB Support</b>	[Enabled]
<b>USB Keyboard/Mouse Support</b>	[Autodetect]

If a setting is disabled, enable it by using the arrow keys to select the **Enable** and **Autodetect** options in the menu.

5. Press Esc to exit the USB Setup menu; then press Esc again to exit the Devices and I/O ports menu.
6. Press Esc again to exit the Configuration/Setup utility program.
7. Press Enter to save the changes and exit. The computer automatically restarts.

**Note:** If you restore the CMOS default settings in your computer, the USB mode will be disabled and you will have to repeat the preceding steps to enable the USB mode again.

After you have verified that the computer USB mode is enabled, use the instructions given in “Installing your USB Numeric Keypad” on page 1-16 to connect the keypad to a USB connector.

To verify that the computer USB mode is enabled in an Aptiva computer:

1. Turn on your computer.
2. When the IBM and Aptiva logos display, press F1. The main CMOS menu window opens.
3. Press ↓ repeatedly to scroll through the CMOS menu selections until **Input/Output** is highlighted; then press Enter.
4. Verify that the setting on your computer matches the following setting.

**[Onboard USB]****[Enabled]**

If the setting is disabled, enable it by using the arrow keys to highlight the **Enable** option in the menu.

5. Press Esc to exit the Input/Output Ports menu; then press Esc again to exit the Main menu.
6. Press Enter to save the changes and exit. The computer automatically restarts.

**Note:** If you restore the CMOS default settings in your computer, the USB mode will be disabled and you will have to repeat the preceding steps to enable the USB mode again.

After you have verified that the computer USB mode is enabled, use the instructions given in “Installing your USB Numeric Keypad” on page 1-16 to connect the keypad to a USB connector.

To verify that the USB mode is enabled in a ThinkPad computer using Windows 2000:

1. Click **Start**.
2. Click **Settings**.
3. Double-click **Control Panel**.
4. Double-click **System**.
5. Click **Hardware**.
6. Click **Device Manager**.
7. In the displayed device list, find **Universal Serial Bus Controllers**. If there is no yellow ? or red X displayed next to **Universal Serial Bus Controllers**, the USB mode is enabled.

After you have verified that the computer USB mode is enabled, use the instructions given in “Installing your USB Numeric Keypad” on page 1-16 to connect the keypad to a USB connector.

To verify that the USB mode is enabled in a ThinkPad computer using Windows 98:

1. Click **Start**.
2. Click **Settings**.
3. Double-click **Control Panel**.
4. Double-click **System**.
5. Click **Device Manager**.
6. In the displayed device list, find **Universal Serial Bus Controllers**. If there is no yellow ? or red X displayed next to **Universal Serial Bus Controllers**, the USB mode is enabled.

After you have verified that the computer USB mode is enabled, use the instructions given in “Installing the USB Numeric Keypad software” to install the USB Numeric Keypad software.

---

## Installing the USB Numeric Keypad software

**Note:** If you are using a notebook computer, install the device driver according to the following instructions. If you are using a desktop computer, you will not need to install the device driver.

When you install the device driver, pressing the NumLock key on your USB Numeric Keypad will not

change the function of the keypad. However, the NumLock key on your notebook computer keyboard will still function normally.

Performing the following instructions for installing the device driver for the USB Numeric Keypad will shut down and restart your computer. Make sure that you close all programs before installing the device driver.


Insert the device driver CD into the CD-ROM drive.

1. On your desktop, double-click **My Computer**; then double-click the icon with the letter that corresponds to your CD drive.
2. The Welcome Window opens. Click **Next**.
3. The Installation Directory window opens. Click **Next**.
4. The Ready to Install window opens. Click **Finished**.
5. Wait until the Finished window opens. Click **Finish**.
6. Windows will now shut down and restart your computer.

After the USB Numeric Keypad software is installed, use the instructions given in “Installing your USB Numeric Keypad” on page 1-8 to connect the keypad to a USB connector.

---

## **Installing your USB Numeric Keypad**

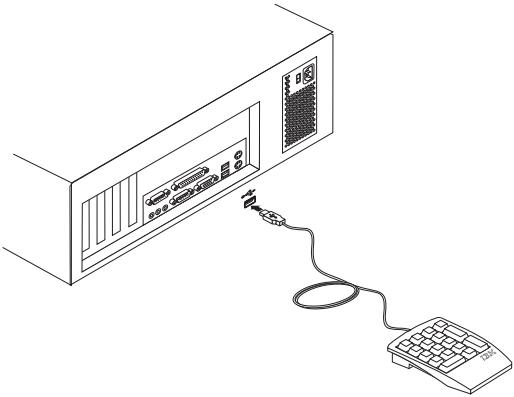

Attach the keypad cable to the USB port as shown above. For additional information on this product, visit the IBM Personal Computing Web site, at: <http://www.ibm.com/pc>

---

## **Product registration**

Thank you for purchasing OPTIONS by IBM®. Please take a few moments to register your product and provide us with information that will help IBM to better serve you in the future. Your feedback is valuable to us in developing products and services that are important to you, as well as in developing better ways to communicate with you. Register your option on the IBM Web site at:

<http://www.ibm.com/pc/register>

IBM will send you information and updates on your registered product unless you indicate on the Web site questionnaire that you do not want to receive further information.



---

## **Part 2: Appendixes**

The following appendixes contain help and service information, the product warranties, and notices.

---

### **Appendix A. Help and service information**

This section contains information on how to obtain online and telephone technical support.

---

#### **Online technical support**

Online technical support is available during the life of your product. Online assistance can be obtained through the Personal Computing Support Web site and the IBM Automated Fax System.

<i>Online technical support</i>	
IBM Personal Computing Support Web Site	<a href="http://www.ibm.com/pc/support">http://www.ibm.com/pc/support</a>
IBM Automated Fax System	1-800-426-3395 (U.S. and Canada)

During the warranty period, assistance for replacement or exchange of defective components is available. In addition, if your IBM option is installed in an IBM computer, you might be

entitled to service at your location. Your technical support representative can help you determine the best alternative.

---

## **Telephone technical support**

Marketing, installation, and configuration support through the HelpCenter® will be withdrawn or made available for a fee, at IBM's discretion, 90 days after the option has been withdrawn from marketing. Additional support offerings, including step-by-step installation assistance, are available for a nominal fee.

To assist the technical support representative, have available as much of the following information as possible:

1. Option name
2. Option number
3. Proof of purchase
4. Computer manufacturer, model, serial number (if IBM), and manual
5. Exact wording of the error message (if any)
6. Description of the problem
7. Hardware and software configuration information for your system

If possible, be at your computer. Your technical support representative might want to walk you through the problem during the call.

For the support telephone number and support hours by country, refer to the following table or to the enclosed technical support insert. If the number is not provided, contact your IBM reseller or IBM marketing representative. Response time may vary depending on the number and nature of the calls received.

<i>Support 24 hours a day, 7 days a week</i>	
Canada	1-800-565-3344
U.S.A./Puerto Rico	1-800-772-2227

---

## **Appendix B. Product warranties and notices**

---

### **Warranty Statements**

The warranty statements consist of two parts: Part 1 and Part 2. Part 1 varies by country. Part 2 is the same for both statements. Be sure to read both the Part 1 that applies to your country and Part 2.

- **United States, Puerto Rico, and Canada (Z125-4753-05 11/97)**  
(Part 1 - General Terms on page 2-4)
- **Worldwide except Canada, Puerto Rico, Turkey, and United States (Z125-5697-01 11/97)**  
(Part 1 - General Terms on page 2-10)
- **Worldwide Country-Unique Terms**  
(Part 2 - Country-Unique Terms on page 2-15)

### **IBM Statement of Limited Warranty for United States, Puerto Rico, and Canada (Part 1 - General Terms)**

---

*This Statement of Limited Warranty includes Part 1 - General Terms and Part 2 - Country-unique Terms. The terms of Part 2 may replace or modify those of Part 1. The warranties provided by IBM in this Statement of Limited Warranty apply only to Machines you purchase for your use, and not for resale, from IBM or your reseller. The term "Machine" means an IBM machine, its features, conversions, upgrades, elements, or accessories, or any combination of them. The term "Machine" does not include any software programs, whether pre-loaded with the Machine, installed subsequently or otherwise. Unless IBM specifies otherwise, the following warranties apply only in the country*

*where you acquire the Machine. Nothing in this Statement of Warranty affects any statutory rights of consumers that cannot be waived or limited by contract. If you have any questions, contact IBM or your reseller.*

**Machine** - USB Numeric Keypad

**Warranty Period\*** - One Year

*\*Contact your place of purchase for warranty service information. Some IBM Machines are eligible for On-site warranty service depending on the country where service is performed.*

### **The IBM Warranty for Machines**

IBM warrants that each Machine 1) is free from defects in materials and workmanship and 2) conforms to IBM's Official Published Specifications. The warranty period for a Machine is a specified, fixed period commencing on its Date of Installation. The date on your sales receipt is the Date of Installation, unless IBM or your reseller informs you otherwise.

During the warranty period IBM or your reseller, if approved by IBM to provide warranty service, will provide repair and exchange service for the Machine, without charge, under the type of service designated for the Machine and will manage and install engineering changes that apply to the Machine.

If a Machine does not function as warranted during the warranty period, and IBM or your reseller are unable to either 1) make it do so or 2) replace it with one that is at least functionally equivalent, you may return it to your place of purchase and your money will be refunded. The replacement may not be new, but will be in good working order.

### **Extent of Warranty**

The warranty does not cover the repair or exchange of a Machine resulting from misuse, accident, modification, unsuitable physical or operating environment, improper maintenance by you, or failure caused

by a product for which IBM is not responsible. The warranty is voided by removal or alteration of Machine or parts identification labels.

**THESE WARRANTIES ARE YOUR EXCLUSIVE WARRANTIES AND REPLACE ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THESE WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF EXPRESS OR IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN THAT EVENT, SUCH WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.**

**Items Not Covered by Warranty**

IBM does not warrant uninterrupted or error-free operation of a Machine.

Unless specified otherwise, IBM provides non-IBM machines **WITHOUT WARRANTIES OF ANY KIND.**

Any technical or other support provided for a Machine under warranty, such as assistance via telephone with "how-to" questions and those regarding Machine set-up and installation, will be provided **WITHOUT WARRANTIES OF ANY KIND.**

**Warranty Service**

To obtain warranty service for the Machine, contact your reseller or IBM. In the United States, call IBM at 1-800-772-2227. In Canada, call IBM at 1-800-565-3344. You may be required to present proof of purchase.

IBM or your reseller provides certain types of repair and exchange service, either at your location or at a service center, to keep Machines in, or restore them to, conformance with their Specifications. IBM or your reseller will inform you of the available types of service for a Machine based on its country of installation. IBM may repair the failing Machine or exchange it at its discretion.

When warranty service involves the exchange of a Machine or part, the item IBM or your reseller replaces becomes its property and the replacement becomes yours. You represent that all removed items are genuine and unaltered. The replacement may not be new, but will be in good working order and at least functionally equivalent to the item replaced. The replacement assumes the warranty service status of the replaced item.

Any feature, conversion, or upgrade IBM or your reseller services must be installed on a Machine which is 1) for certain Machines, the designated, serial-numbered Machine and 2) at an engineering-change level compatible with the feature, conversion, or upgrade. Many features, conversions, or upgrades involve the removal of parts and their return to IBM. A part that replaces a removed part will assume the warranty service status of the removed part.

Before IBM or your reseller exchanges a Machine or part, you agree to remove all features, parts, options, alterations, and attachments not under warranty service.

You also agree to

1. ensure that the Machine is free of any legal obligations or restrictions that prevent its exchange;
2. obtain authorization from the owner to have IBM or your reseller service a Machine that you do not own; and

3. where applicable, before service is provided
  - a. follow the problem determination, problem analysis, and service request procedures that IBM or your reseller provides,
  - b. secure all programs, data, and funds contained in a Machine,
  - c. provide IBM or your reseller with sufficient, free, and safe access to your facilities to permit them to fulfill their obligations, and
  - d. inform IBM or your reseller of changes in a Machine's location.

IBM is responsible for loss of, or damage to, your Machine while it is 1) in IBM's possession or 2) in transit in those cases where IBM is responsible for the transportation charges.

Neither IBM nor your reseller is responsible for any of your confidential, proprietary or personal information contained in a Machine which you return to IBM or your reseller for any reason. You should remove all such information from the Machine prior to its return.

#### **Production Status**

Each IBM Machine is manufactured from new parts, or new and used parts. In some cases, the Machine may not be new and may have been previously installed. Regardless of the Machine's production status, IBM's appropriate warranty terms apply.

#### **Limitation of Liability**

Circumstances may arise where, because of a default on IBM's part or other liability, you are entitled to recover damages from IBM. In each such instance, regardless of the basis on which you are entitled to claim damages from IBM (including fundamental breach, negligence, misrepresentation, or other contract or tort claim), IBM is liable for no more than

1. damages for bodily injury (including death) and damage to real property and tangible personal property; and

2. the amount of any other actual direct damages, up to the greater of U.S. \$100,000 (or equivalent in local currency) or the charges (if recurring, 12 months' charges apply) for the Machine that is the subject of the claim.

This limit also applies to IBM's suppliers and your reseller. It is the maximum for which IBM, its suppliers, and your reseller are collectively responsible.

**UNDER NO CIRCUMSTANCES IS IBM LIABLE FOR ANY OF THE FOLLOWING: 1) THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES (OTHER THAN THOSE UNDER THE FIRST ITEM LISTED ABOVE); 2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR 3) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF IBM, ITS SUPPLIERS OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

## **IBM Statement of Warranty Worldwide except Canada, Puerto Rico, Turkey, United States (Part 1 - General Terms)**

---

*This Statement of Warranty includes Part 1 - General Terms and Part 2 - Country-unique Terms. The terms of Part 2 may replace or modify those of Part 1. The warranties provided by IBM in this Statement of Warranty apply only to Machines you purchase for your use, and not for resale, from IBM or your reseller. The term "Machine" means an IBM machine, its features, conversions, upgrades, elements, or accessories, or any combination of them. The term "Machine" does not include any software programs, whether pre-loaded with the Machine, installed subsequently or otherwise. Unless IBM specifies otherwise, the following warranties apply only in the country where you acquire the Machine. Nothing in this Statement of Warranty affects any statutory rights of consumers that cannot be waived or limited by contract. If you have any questions, contact IBM or your reseller.*

**Machine** - USB Numeric Keypad

**Warranty Period\*** - One Year

*\*Contact your place of purchase for warranty service information. Some IBM Machines are eligible for On-site warranty service depending on the country where service is performed.*

### **The IBM Warranty for Machines**

IBM warrants that each Machine 1) is free from defects in materials and workmanship and 2) conforms to IBM's Official Published Specifications. The warranty period for a Machine is a specified, fixed period commencing on its Date of Installation. The date on your sales receipt is the Date of Installation, unless IBM or your reseller informs you otherwise.

During the warranty period IBM or your reseller, if approved by IBM to provide warranty service, will provide repair and exchange service for the Machine, without charge, under the type of service designated for the Machine and will manage and install engineering changes that apply to the Machine.

If a Machine does not function as warranted during the warranty period, and IBM or your reseller are unable to either 1) make it do so or 2) replace it with one that is at least functionally equivalent, you may return it to your place of purchase and your money will be refunded. The replacement may not be new, but will be in good working order.

#### **Extent of Warranty**

The warranty does not cover the repair or exchange of a Machine resulting from misuse, accident, modification, unsuitable physical or operating environment, improper maintenance by you, or failure caused by a product for which IBM is not responsible. The warranty is voided by removal or alteration of Machine or parts identification labels.

**THESE WARRANTIES ARE YOUR EXCLUSIVE  
WARRANTIES AND REPLACE ALL OTHER  
WARRANTIES OR CONDITIONS, EXPRESS OR  
IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE  
IMPLIED WARRANTIES OR CONDITIONS OF  
MERCHANTABILITY AND FITNESS FOR A  
PARTICULAR PURPOSE. THESE WARRANTIES GIVE  
YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO  
HAVE OTHER RIGHTS WHICH VARY FROM  
JURISDICTION TO JURISDICTION. SOME  
JURISDICTIONS DO NOT ALLOW THE EXCLUSION  
OR LIMITATION OF EXPRESS OR IMPLIED  
WARRANTIES, SO THE ABOVE EXCLUSION OR  
LIMITATION MAY NOT APPLY TO YOU. IN THAT  
EVENT, SUCH WARRANTIES ARE LIMITED IN**

**DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.**

**Items Not Covered by Warranty**

IBM does not warrant uninterrupted or error-free operation of a Machine.

Unless specified otherwise, IBM provides non-IBM machines **WITHOUT WARRANTIES OF ANY KIND.**

Any technical or other support provided for a Machine under warranty, such as assistance via telephone with "how-to" questions and those regarding Machine set-up and installation, will be provided

**WITHOUT WARRANTIES OF ANY KIND.**

**Warranty Service**

To obtain warranty service for the Machine, contact your reseller or IBM. You may be required to present proof of purchase.

IBM or your reseller provides certain types of repair and exchange service, either at your location or at a service center, to keep Machines in, or restore them to, conformance with their Specifications. IBM or your reseller will inform you of the available types of service for a Machine based on its country of installation. IBM may repair the failing Machine or exchange it at its discretion.

When warranty service involves the exchange of a Machine or part, the item IBM or your reseller replaces becomes its property and the replacement becomes yours. You represent that all removed items are genuine and unaltered. The replacement may not be new, but will be in good working order and at least functionally equivalent to the item replaced. The replacement assumes the warranty service status of the replaced item.

Any feature, conversion, or upgrade IBM or your reseller services must be installed on a Machine which is 1) for certain Machines, the designated, serial-numbered Machine and 2) at an engineering-change

level compatible with the feature, conversion, or upgrade. Many features, conversions, or upgrades involve the removal of parts and their return to IBM. A part that replaces a removed part will assume the warranty service status of the removed part.

Before IBM or your reseller exchanges a Machine or part, you agree to remove all features, parts, options, alterations, and attachments not under warranty service.

You also agree to

1. ensure that the Machine is free of any legal obligations or restrictions that prevent its exchange;
2. obtain authorization from the owner to have IBM or your reseller service a Machine that you do not own; and
3. where applicable, before service is provided
  - a. follow the problem determination, problem analysis, and service request procedures that IBM or your reseller provides,
  - b. secure all programs, data, and funds contained in a Machine,
  - c. provide IBM or your reseller with sufficient, free, and safe access to your facilities to permit them to fulfil their obligations, and
  - d. inform IBM or your reseller of changes in a Machine's location.

IBM is responsible for loss of, or damage to, your Machine while it is 1) in IBM's possession or 2) in transit in those cases where IBM is responsible for the transportation charges.

Neither IBM nor your reseller is responsible for any of your confidential, proprietary or personal information contained in a Machine which you return to IBM or your reseller for any reason. You should remove all such information from the Machine prior to its return.

#### **Production Status**

Each IBM Machine is manufactured from new parts, or new and used parts. In some cases, the Machine may not be new and may have been

previously installed. Regardless of the Machine's production status, IBM's appropriate warranty terms apply.

#### **Limitation of Liability**

Circumstances may arise where, because of a default on IBM's part or other liability, you are entitled to recover damages from IBM. In each such instance, regardless of the basis on which you are entitled to claim damages from IBM (including fundamental breach, negligence, misrepresentation, or other contract or tort claim), IBM is liable for no more than

1. damages for bodily injury (including death) and damage to real property and tangible personal property; and
2. the amount of any other actual direct damages, up to the greater of U.S. \$100,000 (or equivalent in local currency) or the charges (if recurring, 12 months' charges apply) for the Machine that is the subject of the claim.

This limit also applies to IBM's suppliers and your reseller. It is the maximum for which IBM, its suppliers, and your reseller are collectively responsible.

**UNDER NO CIRCUMSTANCES IS IBM LIABLE FOR ANY OF THE FOLLOWING: 1) THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES (OTHER THAN THOSE UNDER THE FIRST ITEM LISTED ABOVE); 2) LOSS OF, OR DAMAGE TO, YOUR RECORDS OR DATA; OR 3) SPECIAL, INCIDENTAL, OR INDIRECT DAMAGES OR FOR ANY ECONOMIC CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), EVEN IF IBM, ITS SUPPLIERS OR YOUR RESELLER IS INFORMED OF THEIR POSSIBILITY. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO**

**THE ABOVE LIMITATION OR EXCLUSION MAY NOT  
APPLY TO YOU.**

## **Part 2 - Worldwide Country-Unique Terms**

---

### **ASIA PACIFIC**

**AUSTRALIA: The IBM Warranty for Machines:** The following paragraph is added to this Section:  
The warranties specified in this Section are in addition to any rights you may have under the Trade Practices Act 1974 or other legislation and are only limited to the extent permitted by the applicable legislation.

**Extent of Warranty:** The following replaces the first and second sentences of this Section:  
The warranty does not cover the repair or exchange of a Machine resulting from misuse, accident, modification, unsuitable physical or operating environment, operation in other than the Specified Operating Environment, improper maintenance by you, or failure caused by a product for which IBM is not responsible.

**Limitation of Liability:** The following is added to this Section:  
Where IBM is in breach of a condition or warranty implied by the Trade Practices Act 1974, IBM's liability is limited to the repair or replacement of the goods or the supply of equivalent goods. Where that condition or warranty relates to right to sell, quiet possession or clear title, or the goods are of a kind ordinarily acquired for personal, domestic or household use or consumption, then none of the limitations in this paragraph apply.

**PEOPLE'S REPUBLIC OF CHINA: Governing Law:** The following is added to this Statement:  
The laws of the State of New York govern this Statement.

**INDIA: Limitation of Liability:** The following replaces items 1 and 2 of this Section:

1. liability for bodily injury (including death) or damage to real property and tangible personal property will be limited to that caused by IBM's negligence;
2. as to any other actual damage arising in any situation involving nonperformance by IBM pursuant to, or in any way related to the subject of this Statement of Warranty, IBM's liability will be limited to the charge paid by you for the individual Machine that is the subject of the claim.

**NEW ZEALAND: The IBM Warranty for Machines:** The following paragraph is added to this Section:

The warranties specified in this Section are in addition to any rights you may have under the Consumer Guarantees Act 1993 or other legislation which cannot be excluded or limited. The Consumer Guarantees Act 1993 will not apply in respect of any goods which IBM provides, if you require the goods for the purposes of a business as defined in that Act.

**Limitation of Liability:** The following is added to this Section:

Where Machines are not acquired for the purposes of a business as defined in the Consumer Guarantees Act 1993, the limitations in this Section are subject to the limitations in that Act.

#### **EUROPE, MIDDLE EAST, AFRICA (EMEA)**

**The following terms apply to all EMEA countries.**

The terms of this Statement of Warranty apply to Machines purchased from an IBM reseller. If you purchased this Machine from IBM, the terms and conditions of the applicable IBM agreement prevail over this warranty statement.

#### **Warranty Service**

If you purchased an IBM Machine in Austria, Belgium, Denmark, Estonia, Finland, France, Germany, Greece, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Netherlands, Norway, Portugal, Spain,

Sweden, Switzerland or United Kingdom, you may obtain warranty service for that Machine in any of those countries from either (1) an IBM reseller approved to perform warranty service or (2) from IBM.

If you purchased an IBM Personal Computer Machine in Albania, Armenia, Belarus, Bosnia and Herzegovina, Bulgaria, Croatia, Czech Republic, Georgia, Hungary, Kazakhstan, Kirghizia, Federal Republic of Yugoslavia, Former Yugoslav Republic of Macedonia (FYROM), Moldova, Poland, Romania, Russia, Slovak Republic, Slovenia, or Ukraine, you may obtain warranty service for that Machine in any of those countries from either (1) an IBM reseller approved to perform warranty service or (2) from IBM.

The applicable laws, Country-unique terms and competent court for this Statement are those of the country in which the warranty service is being provided. However, the laws of Austria govern this Statement if the warranty service is provided in Albania, Armenia, Belarus, Bosnia and Herzegovina, Bulgaria, Croatia, Czech Republic, Federal Republic of Yugoslavia, Georgia, Hungary, Kazakhstan, Kirghizia, Former Yugoslav Republic of Macedonia (FYROM), Moldova, Poland, Romania, Russia, Slovak Republic, Slovenia, and Ukraine.

**The following terms apply to the country specified:**

**EGYPT: Limitation of Liability:** The following replaces item 2 in this Section:  
2. as to any other actual direct damages, IBM's liability will be limited to the total amount you paid for the Machine that is the subject of the claim.

Applicability of suppliers and resellers (unchanged).

**FRANCE: Limitation of Liability:** The following replaces the second sentence of the first paragraph of this Section:  
In such instances, regardless of the basis on which you are entitled to claim damages from IBM, IBM is liable for no more than: (items 1 and 2 unchanged).

**GERMANY: The IBM Warranty for Machines:** The following replaces the first sentence of the first paragraph of this Section:  
The warranty for an IBM Machine covers the functionality of the Machine for its normal use and the Machine's conformity to its Specifications.

The following paragraphs are added to this Section:  
The minimum warranty period for Machines is six months.

In case IBM or your reseller are unable to repair an IBM Machine, you can alternatively ask for a partial refund as far as justified by the reduced value of the unrepainted Machine or ask for a cancellation of the respective agreement for such Machine and get your money refunded.

**Extent of Warranty:** The second paragraph does not apply.

**Warranty Service:** The following is added to this Section:  
During the warranty period, transportation for delivery of the failing Machine to IBM will be at IBM's expense.

**Production Status:** The following paragraph replaces this Section:  
Each Machine is newly manufactured. It may incorporate in addition to new parts, re-used parts as well.

**Limitation of Liability:** The following is added to this Section:  
The limitations and exclusions specified in the Statement of Warranty will not apply to damages caused by IBM with fraud or gross negligence and for express warranty.

In item 2, replace "U.S. \$100,000" with "1.000.000 DEM."

The following sentence is added to the end of the first paragraph of item 2:  
IBM's liability under this item is limited to the violation of essential contractual terms in cases of ordinary negligence.

**IRELAND: Extent of Warranty:** The following is added to this Section:

Except as expressly provided in these terms and conditions, all statutory conditions, including all warranties implied, but without prejudice to the generality of the foregoing all warranties implied by the Sale of Goods Act 1893 or the Sale of Goods and Supply of Services Act 1980 are hereby excluded.

**Limitation of Liability:** The following replaces items one and two of the first paragraph of this Section:

1. death or personal injury or physical damage to your real property solely caused by IBM's negligence; and 2. the amount of any other actual direct damages, up to the greater of Irish Pounds 75,000 or 125 percent of the charges (if recurring, the 12 months' charges apply) for the Machine that is the subject of the claim or which otherwise gives rise to the claim.

Applicability of suppliers and resellers (unchanged).

The following paragraph is added at the end of this Section:  
IBM's entire liability and your sole remedy, whether in contract or in tort, in respect of any default shall be limited to damages.

**ITALY: Limitation of Liability:** The following replaces the second sentence in the first paragraph:

In each such instance unless otherwise provided by mandatory law, IBM is liable for no more than: (item 1 unchanged) 2)as to any other actual damage arising in all situations involving non-performance by IBM pursuant to, or in any way related to the subject matter of this Statement of Warranty, IBM's liability, will be limited to the total amount you paid for the Machine that is the subject of the claim.

Applicability of suppliers and resellers (unchanged).

The following replaces the second paragraph of this Section:  
Unless otherwise provided by mandatory law, IBM and your reseller are not liable for any of the following: (items 1 and 2 unchanged) 3)  
indirect damages, even if IBM or your reseller is informed of their possibility.

**SOUTH AFRICA, NAMIBIA, BOTSWANA, LESOTHO AND**

**SWAZILAND: Limitation of Liability:** The following is added to this Section:

IBM's entire liability to you for actual damages arising in all situations involving nonperformance by IBM in respect of the subject matter of this Statement of Warranty will be limited to the charge paid by you for the individual Machine that is the subject of your claim from IBM.

**TURKIYE: Production Status:** The following replaces this Section: IBM fulfils customer orders for IBM Machines as newly manufactured in accordance with IBM's production standards.

**UNITED KINGDOM: Limitation of Liability:** The following replaces items 1 and 2 of the first paragraph of this Section:

1. death or personal injury or physical damage to your real property solely caused by IBM's negligence;
2. the amount of any other actual direct damages or loss, up to the greater of Pounds Sterling 150,000 or 125 percent of the charges (if recurring, the 12 months' charges apply) for the Machine that is the subject of the claim or which otherwise gives rise to the claim.

The following item is added to this paragraph:

3. breach of IBM's obligations implied by Section 12 of the Sale of Goods Act 1979 or Section 2 of the Supply of Goods and Services Act 1982.

Applicability of suppliers and resellers (unchanged).

The following is added to the end of this Section:

IBM's entire liability and your sole remedy, whether in contract or in tort, in respect of any default will be limited to damages.

**NORTH AMERICA**

**CANADA: Warranty Service:** The following is added to this Section: To obtain warranty service from IBM, call **1-800-565-3344**. In Toronto, call **416-383-3344**.

**UNITED STATES OF AMERICA: Warranty Service:** The following is added to this Section:  
To obtain warranty service from IBM, call **1-800-772-2227**.

---

## Notices

References in this publication to IBM products, programs, or services do not imply that IBM intends to make these available in all countries in which IBM operates. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Subject to IBM's valid intellectual property or other legally protectable rights, any functionally equivalent product, program, or service may be used instead of the IBM product, program, or service. The evaluation and verification of operation in conjunction with other products, except those expressly designated by IBM, are the responsibility of the user.

IBM may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk, NY 10504-1785  
U.S.A.

Any references in this publication to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

---

## **Trademarks**

The following terms are trademarks of the IBM Corporation in the United States or other countries or both:

IBM  
ThinkPad  
Aptiva  
HelpCenter

Microsoft and Windows are trademarks of the Microsoft Corporation in the United States, other countries, or both.

Other company, product, and service names may be trademarks or service marks of others.

---

## **Electronic Emission Notices**

USB Numeric Keypad

### **Federal Communications Commission (FCC) Statement**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM authorized dealer or service representative for help.


Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM authorized dealers. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment.

Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

International Business Machines Corporation  
New Orchard Road  
Armonk, NY 10504  
Telephone: 1-919-543-2193

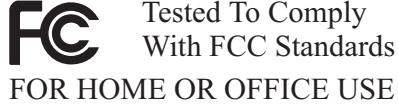**Industry Canada Class B Emission Compliance Statement**

This Class B digital apparatus complies with Canadian ICES-003.

**Avis de conformité à la réglementation d'Industrie Canada**

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**Deutsche EMV-Direktive  
(electromagnetische  
Verträglichkeit)**

Dieses Gerät ist berechtigt in Übereinstimmung mit dem deutschen EMVG vom 9.Nov.92 das EG-Konformitätszeichen zu führen.

Der Aussteller der Konformitätserklärung ist die IBM UK, Greenock.

Dieses Gerät erfüllt die Bedingungen der EN 55022 Klasse B.

## **European Union - Emission Directive**

This product is in conformity with the protection requirements of EU Council Directive 89/366/ECC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

IBM can not accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to CISPR 22 / European Standard EN 55022. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication devices.

**Union Européenne - Directive  
Conformité électromagnétique**

protection raisonnable contre l'interférence d'appareils de communication autorisés.

Ce produit est conforme aux exigences de protection de la Directive 89/336/EEC du Conseil de l'UE sur le rapprochement des lois des États membres en matière de compatibilité électromagnétique.

IBM ne peut accepter aucune responsabilité pour le manquement aux exigences de protection résultant d'une modification non recommandée du produit, y compris l'installation de cartes autres que les cartes IBM.

Ce produit a été testé et il satisfait les conditions de l'équipement informatique de Classe B en vertu de CISPR22 / Standard européen EN 55022. Les conditions pour l'équipement de Classe B ont été définies en fonction d'un contexte résidentiel ordinaire afin de fournir une

**Unione Europea - Directiva EMC  
(Conformidad electromagnética)**

entornos residenciales típicos a fin de proporcionar una protección razonable contra las interferencias con dispositivos de comunicación licenciados.

Este producto satisface los requisitos de protección del Consejo de la UE, Directiva 89/336/CEE en lo que a la legislatura de los Estados Miembros sobre compatibilidad electromagnética se refiere.

IBM no puede aceptar responsabilidad alguna si este producto deja de satisfacer dichos requisitos de protección como resultado de una modificación no recomendada del producto, incluyendo el ajuste de tarjetas de opción que no sean IBM.

Este producto ha sido probado y satisface los límites para Equipos Informáticos Clase B de conformidad con el Estándar CISPR22 y el Estándar Europeo EN 55022. Los límites para los equipos de Clase B se han establecido para

**Union**